
Models

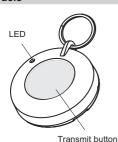

RT27E5001-11

Technical details

Frequency: 868.30 MHz

Radiated

power: 0.11 mW Modulation: FSK

Coding: Easywave A EasywavePlus

Power supply: 1x 3-V-battery CR2032

Operating

temperature: -20 °C to +60 °C

Range: free-field: approx. 150 m

buildings: approx. 30 m

Degree of

protection: IP65

Dimensions: Ø 41 mm x 13 mm

Weight: 16 g

Scope of delivery

Necklace transmitter incl. battery, neckband, operating instruction

Intended use

This necklace transmitter may only be used to operate Easywave radio controls.

The manufacturer shall not be liable for any damage caused by improper or non-intended use.

Safety advice



Do not make any unauthorized alterations or modifications to the transmitter!

Note also the operating instructions of the radio receivers!

Keep the transmitter away from child-ren!

Have faulty devices checked by the manufacturer!

Keep the batteries out of the reach of children!

Start-up

Attach the neckband to the transmitter.

Transfer the transmission code to the radio receiver.

For this read the operating instruction supplied with the radio receiver.

Operating the transmitter

Press the transmission button. The transmitter's LED lights up. The transmitter transmits as long as the button is pressed.

After max. 36 seconds, the transmission process is stopped automatically. Press the transmit button again to repeat the transmission process.

Battery check

The transmitter has a battery check function, which monitors the capacity of the battery cyclically.

If the battery is weak, the LED flashes for about 3 seconds after releasing the transmitter button. At the end of the transmission process, an undervoltage telegram is transmitted.

In case of the transmitter button not being pressed for a long time, the battery check is executed at least once every 24 hours. If a weak capacity is detected an undervoltage telegram is sent automatically.

This telegram can be evaluated by adapted Easywave receivers. For information, read the operating instructions for the relevant receiver.

Replacing the battery

We recommend having the battery replaced by your retailer.

You can find detailed instructions for exchanging the battery on our website.

Trouble shooting

- If the LED does not light up at all: exchange the battery or make sure that the poling of the battery is correct.
- If the LED flashes permanently during the transmission procedure: exchange the battery.
- If the radio receiver doesn't react: move closer to the radio receiver or re-transmit the transmission code to the radio receiver.

Disposal

Waste electrical products and batteries not be disposed of with household waste!

Dispose of the waste product via a collection point for electronic scrap or via your specialist dealer.

Dispose of used batteries in a recycling bin for batteries.

Put the packaging material into the recycling bins for cardboard, paper and plastics.

Warranty

Within the statutory warranty period we undertake to rectify free of charge by repair or replacement any product defects arising from material or production faults.

Any unauthorized tampering with, or modifications to, the product shall render this warranty null and void.

Conformity

(€

Hereby, ELDAT GmbH declares that the radio equipment type RT27 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.eldat.de

Service

If, despite correct handling, faults or malfunctions occur or if the product was damaged, please contact the company at the address below:

ELDAT GmbH

Im Gewerbepark 14 15711 Königs Wusterhausen Germany

Phone: +49 (0) 33 75 / 90 37-310 Fax: +49 (0) 33 75 / 90 37-90

Internet: www.eldat.de E-Mail: info@eldat.de