



TYXIA 1712



Technical characteristics


- Power supplied by 3V lithium battery, CR2430
- Class III insulation
- X3D Transmission frequency:
868.7 MHz to 869.2 MHz
- Maximum radio power < 10 mW
- Receiver category II
- Wireless range: 100 to 300 metres outside,
variable depending on the associated equipment
(the range can vary depending on the installation
conditions and the electromagnetic environment)
- Mounted on a base
- Dimensions: 46 x 121 x 10.7 mm
- Degree of protection: IP 40
- Operating temperature: 0 to +55°C
- Storage temperature: -10 to +70°C
- Installation in an environment with normal
pollution levels

Content


1/ Location/Mounting	14
1.1 Mounted on the wall	14
1.2 Placed on a flat surface	15
2/ Wireless association	16
3/ Create a group	19
4/ Use	20
5/ Troubleshooting	21

1/ Location/Mounting

1.1 Mounted on the wall

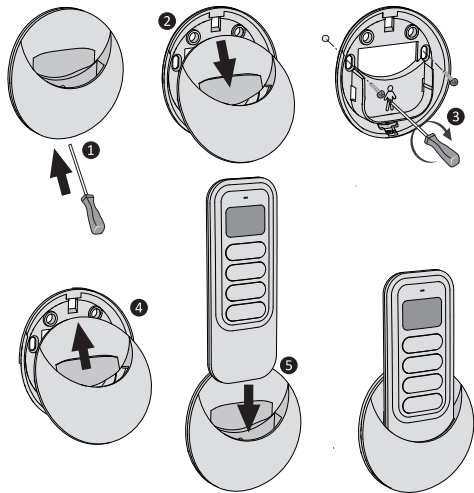



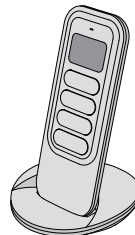




1.2 Placed on a flat surface





EN

2/ Wireless association


This chapter allows you to associate with one or more X3D wireless motor(s), X3D roller shutter receiver(s) or X3D lighting receiver(s)

- 1 Set all the motors or receivers in the same "activity" ( or ) to association standby mode.
- 2 Select the desired "activity" by pressing  or  .
- 3 On the remote control press  and  at the same time and hold for 3 seconds, until the LED flashes. Release.
- 4 The blinds (or lights) are activated briefly when the association is completed.
The number of associated items (shutters or lights) is displayed on the screen ().


You can associate up to 16 receivers (or motors) per activity  or  .

1 Activating association standby mode

- Motor:





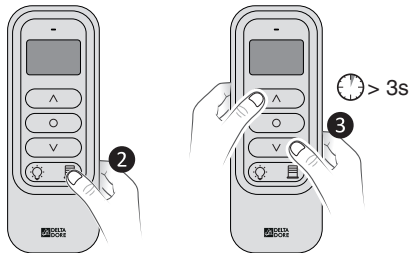



- 1) Upon turning on for the first time, if the motor was not associated before.
- 2) From a remote control used for the motor (already associated) press the  button for 3 seconds.

- Receiver: press its button for 3 seconds until the LED flashes.




3/ Create a group





Creating a group allows the simultaneous control of multiple receivers (or motors).

- 1 Select the desired “Activity” by pressing  or  for three seconds until the  symbol flashes. Release.
- 2 Press  or  as many times as required to select the number of the group to create (e.g. 9).
- 3 Select the receiver (or motor) by pressing on  as many times as required. The controlled item is activated briefly (roller shutter or lighting).
- 4 Press  to add a group to it. The screen displays “IN”.
or press  to remove it from the group. The screen displays “OUT”.

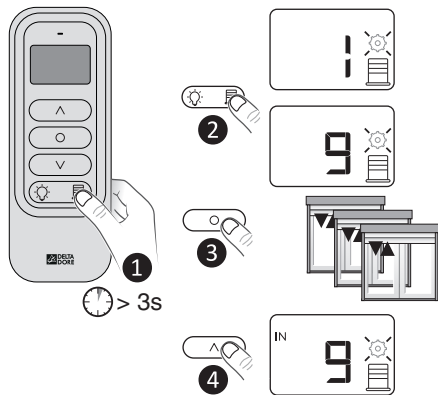









Repeat stages **3** and **4** for each receiver (or motor).


To create another group, repeat stages **2**, **3** and **4**.




- You can create up to 16 groups per “activity”  or .
- A single receiver can be associated with multiple groups.
- To exit the mode press  or  for 3 seconds.


4/ Use

- 1 Select the desired "Activity" by briefly pressing  or .
- 2 Press  or  as many times as required to select the number of the group to control:
 -  ...  : Group 1 to 16
 -  : Group Total
- 3 Press ,  or  to control the light(s) or roller shutter(s).
The LED indicates that the receivers have correctly received the information.

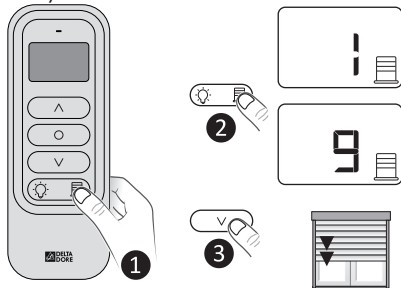
 


5/ Troubleshooting

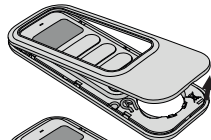

- **The screen displays .**
The battery is low.
Change the battery.




EN

- **Remove an association**
 - Remove the front face of the remote control.
 - Press button A.
 - The red LED flashes.*
 - Press  as many times as required to select the motor (receiver) to remove.
 - Press the  button.
 - Press button A to exit.



- **Remove all associations**
 - Remove the front face of the remote control.
 - Press button A.
 - The red LED flashes.*
 - Press the  and  buttons at the same time and hold for 3 seconds.
 - Press button A to exit.

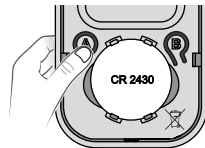



www.deltadore.com



2704633 Rev.01