

Leakage sensor LTS.01

Safety instructions

Electrical devices may only be mounted and connected by electrically skilled persons.

Serious injuries, fire or property damage possible. Please read and follow manual fully.

Danger of electric shock. During installation and cable routing, comply with the regulations and standards which apply for SELV circuits.

These instructions are an integral part of the product, and must remain with the end customer.

Device components

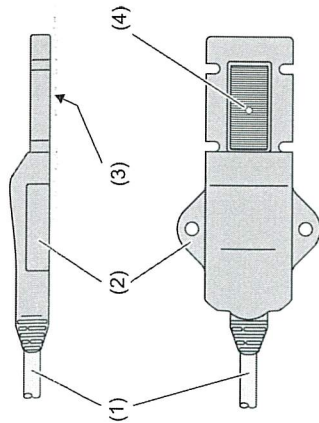


Figure 1



Figure 2

- (1) Connecting cable
- (2) Fixing strap
- (3) Sensor surface
- (4) Ventilation opening
- (5) Supporting surface

Function

Intended use

- Detection of water penetration and leaks
- Connection to KNX pushbutton interfaces or similar binary inputs
- Fitting to the surface to be monitored

Function of the leakage sensor

The device monitors the electrical conductivity between the conductive coatings on the sensor surface. If it is dampened with water, the device detects the change and signals it.

- ⓘ The device cannot prevent water from leaking, but detects and registers it early, so that the impact of water damage can be kept minor.

- ⓘ The sensor surface can be damaged if it comes into contact with aggressive media (e.g. detergent solutions, scrubbing brines or acidic condensation from condensing boilers). Check the sensor area (3) after every alarm. In case of significant damage from corrosion replace the device.

Application examples

- In bathrooms or wet rooms:
 - Below or next to the bathtub or shower
 - Under the wash basin or behind vanities
- In the kitchen area:
 - Under the kitchen unit
 - Under the dishwasher
 - Under the sink
- In utility rooms or functional spaces:
 - Below or behind washing machines
 - In boiler rooms
 - In supply shafts with water pipes
 - In cellar rooms with a risk of backflow
- In living areas:
 - Below or behind aquariums
 - In the heating manifold of underfloor heating systems

Information for electrically skilled persons

Fitting and electrical connection

Fitting the leakage sensor

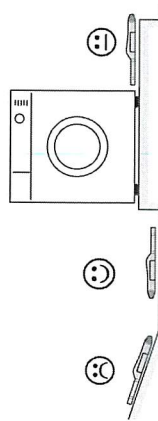


Figure 3: Appropriate and inappropriate locations for fitting

- ⓘ Do not place the device on sloping surfaces, ridges or pedestals (Figure 3).
Look for an appropriate installation location at which escaping water can be detected early.
- Place the device directly on the surface that is to be monitored. The sensor surface (3) must point downwards.
- Mount the device on the supporting surface, e.g. with a screw assembly.
- ⓘ The vent opening (4) may not be used to mount the device.
- ⓘ For proper function, liquid must be able to reach the sensor surface (3).
- ⓘ Do not mount the device to the substrate with sealing compound (silicone, acrylic or similar).
- Fit the connecting cable, e.g. with nail clamps.

- ⓘ The vent opening (4) supports the sensor function and should be free of dirt.

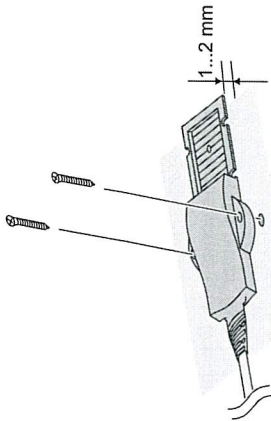


Figure 4

Connecting the leakage sensor

The device is directly connected to an evaluation unit, e.g., pushbutton interface, and supplied by it. The signaling takes place by short-circuiting the supply voltage.

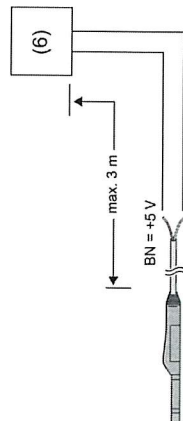


Figure 5

- Connect the device to an evaluation unit (6) that supplies and monitors the device.
- Observe the polarity:
Brown = +
White = - / GND

Commissioning

Parameters to be set for the evaluation unit:

- Debounce time: 127 ms

Appendix

Technical data

Rated voltage	DC 3.3 ... 5 V SELV
Current consumption	typ. 0.5 mA
Short-circuit current	max. 100 mA
Protection class	III
Ambient temperature	0 ... +50 °C
Storage/transport temperature	-40 ... +100 °C
Connecting cable	2 m
Degree of protection	IP 67

Warranty

We reserve the right to make technical and formal changes to the product in the interest of technical progress.

We provide a warranty as provided for by law.

Please send the unit postage-free with a description of the defect to our central customer service office:

Insta GmbH
Service Center
Hohe Steinert 10
58509 Lüdenscheid
Germany